


Gemüseschneider 40 kg/h

Katalog-Code: VG0701400

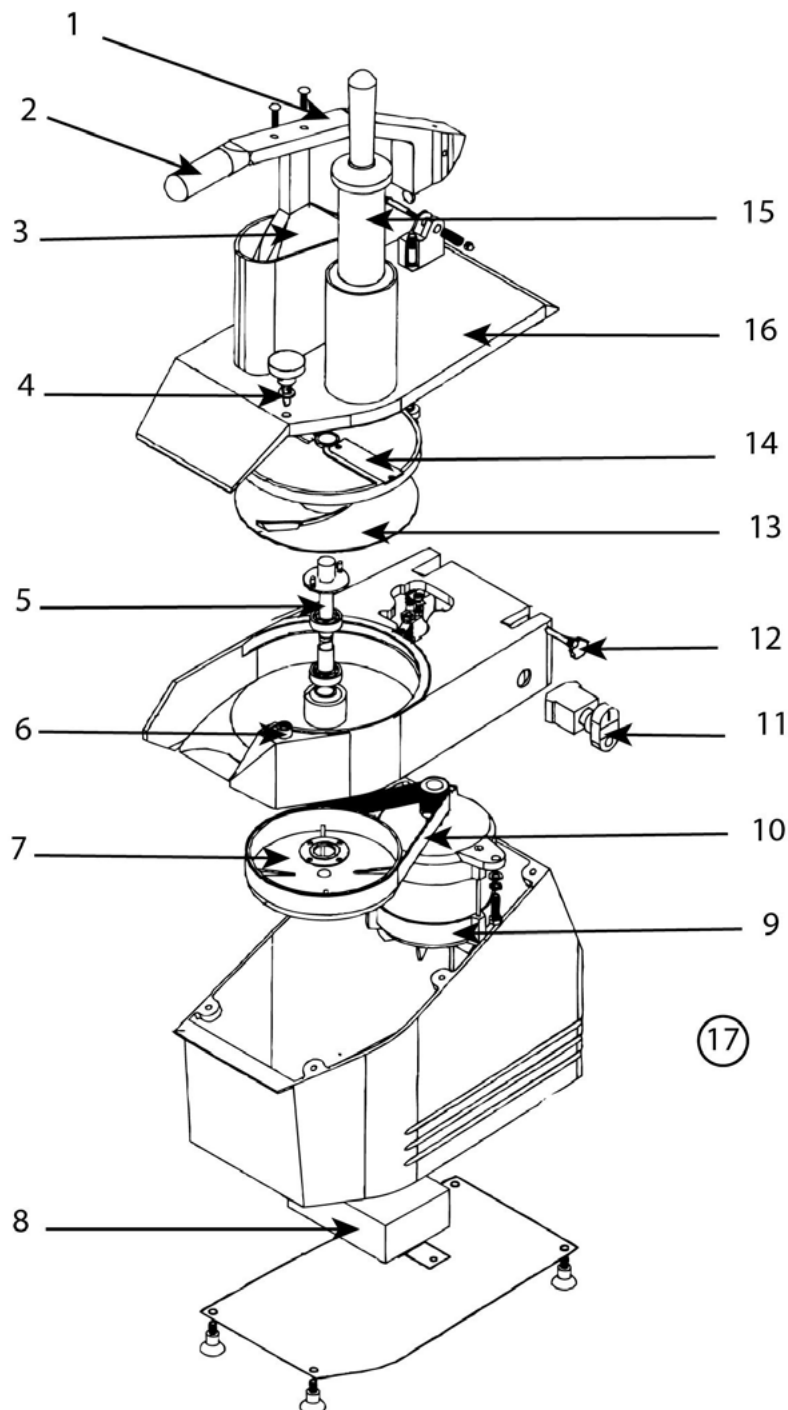

Teilenummer (V abb.Teilenummer vom bild)	Name	Code
V713003V01-01	links drücken Arm	C005338
V713003V01-02	Hangriff	C005350
V713003V01-03	Stahlstößel	
V713003V01-04	Schraube	C005343
V713003V01-05	Anbringen des Werfers	C005342
V713003V01-06	Deckelblockadeelement	C005344
V713003V01-07	Riemenscheibe	C005349
V713003V01-08	Hauptplatine	C005322
V713003V01-09	Motor	
V713003V01-10	Keilriemen	C005332
V713003V01-11	START/STOPP-Taste	C005323
V713003V01-12	Blockade	
V713003V01-13	Disk abwerfen	C005325
V713003V01-14	Klinge	C005336
V713003V01-15	Drücker	C006936
V713003V01-16	oberes Gehäuse	
V713003V01-17	Endausschalter	C005346